


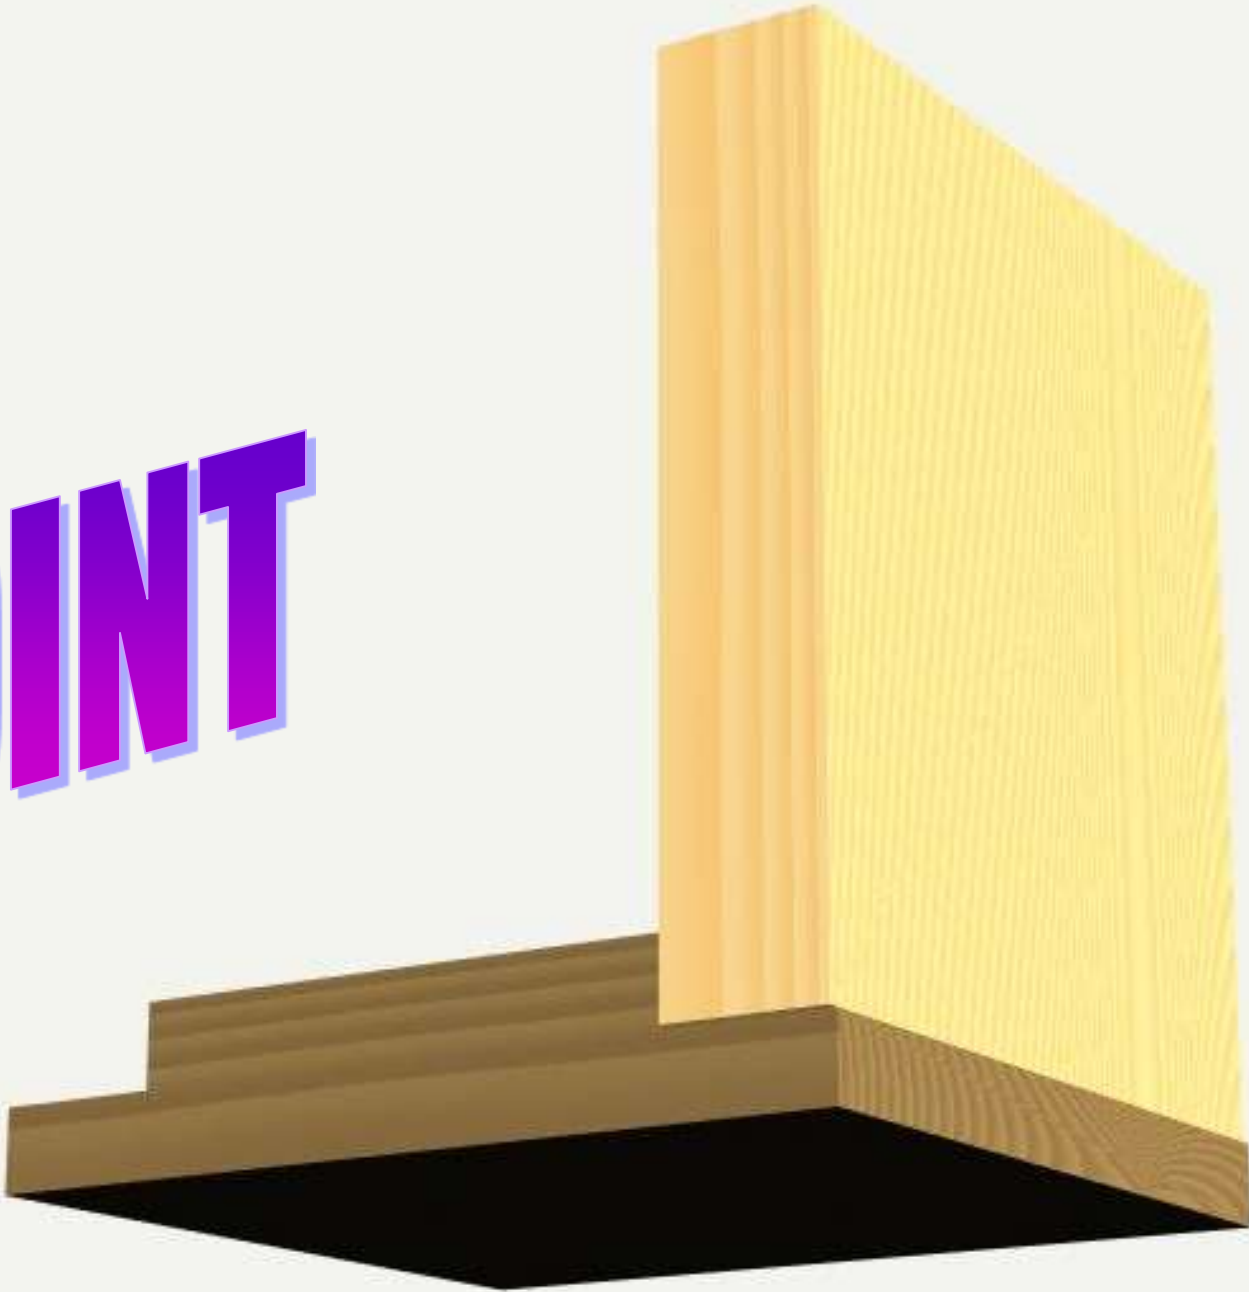


L

A

JOINT



L A JOINT

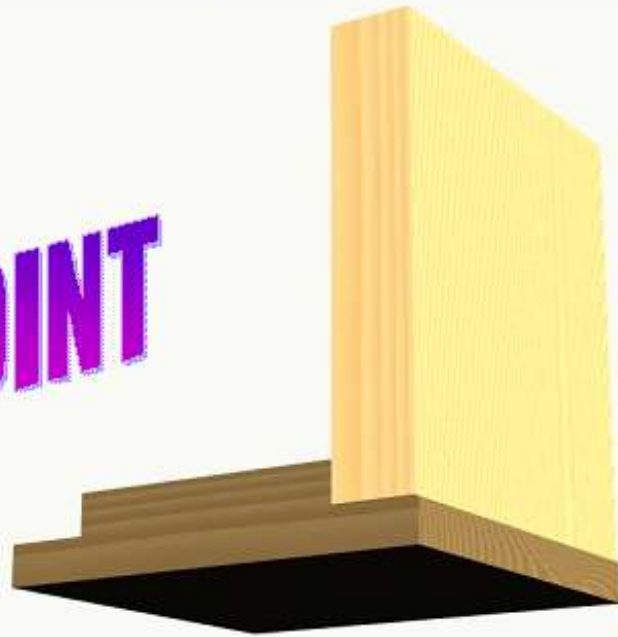


STEP 1


Place pieces of wood together and using a tri square mark a straight line across both ends of your wood



Sand your wood as close to the line as possible, to get a nice straight edge.

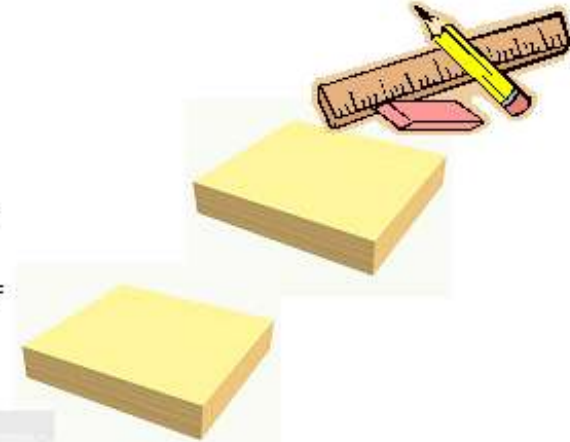


STEP 2

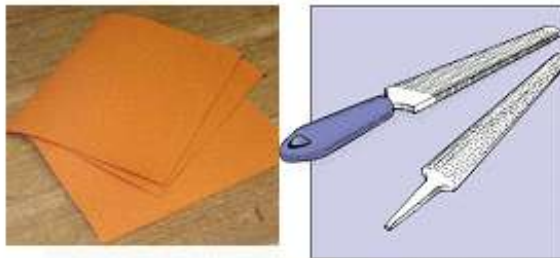


Place wood in the vice

Wrap some sand paper round a file and **GENTLY** Sand any uneven edges like those **circled in red**

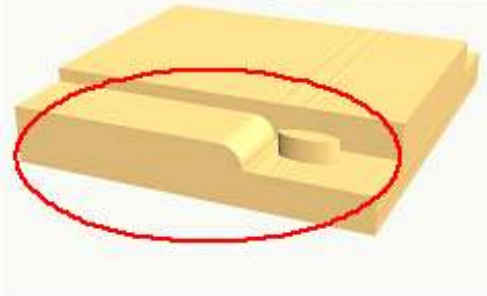


STEP 3

Glue your pieces together

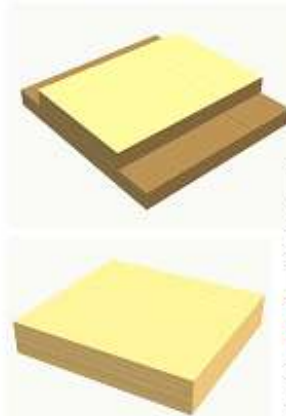


If you have any unwanted bits sticking out like mine **Circled in Red** sand them off on the belt sander after the glue has dried.

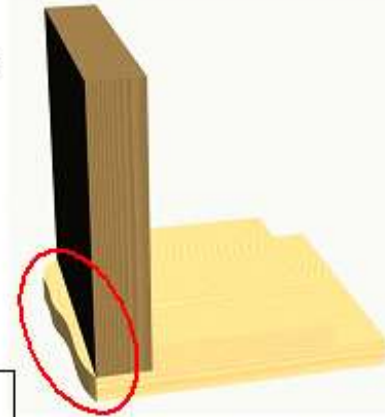


STEP 1

Place pieces of wood together and using a tri square mark a straight line across both ends of your wood

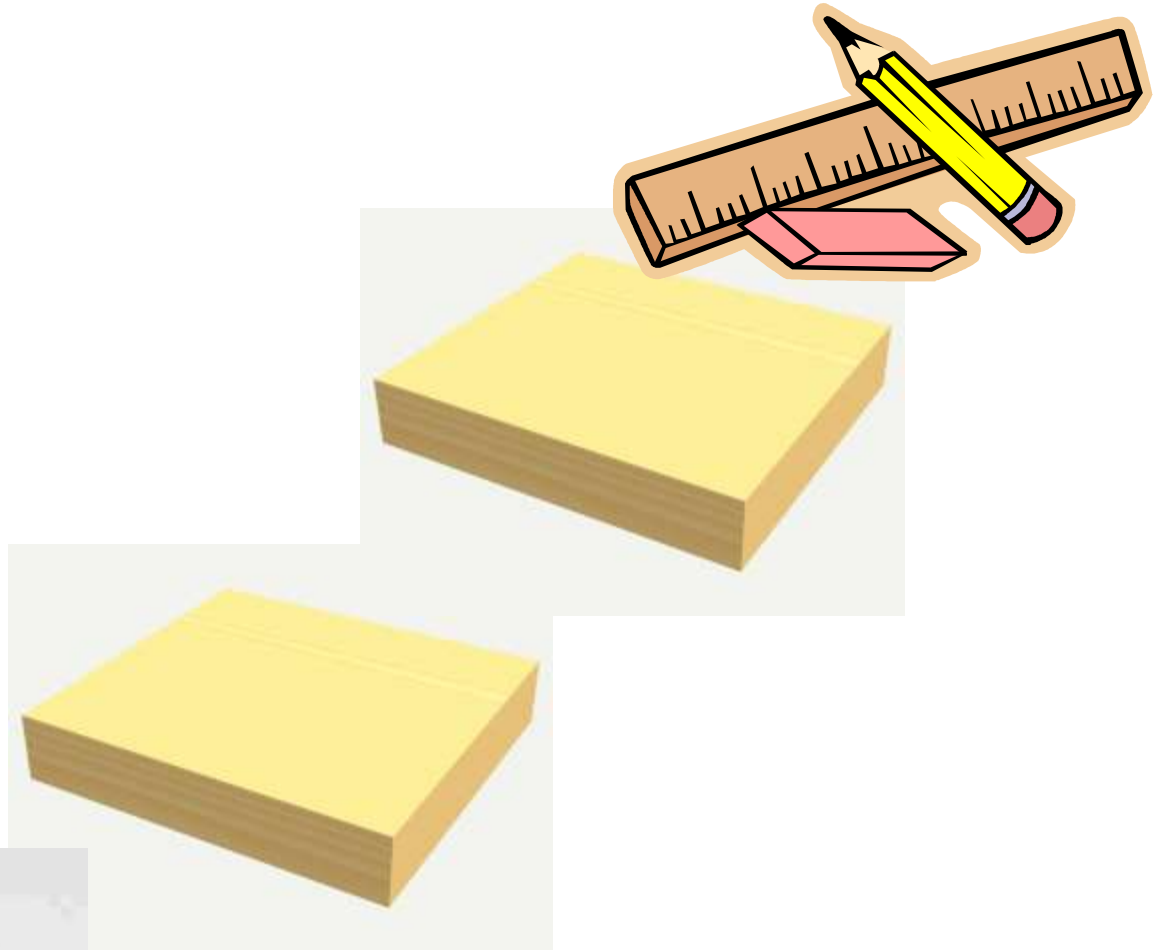

Sand your wood as close to the line as possible, to get a nice straight edge.

STEP 2

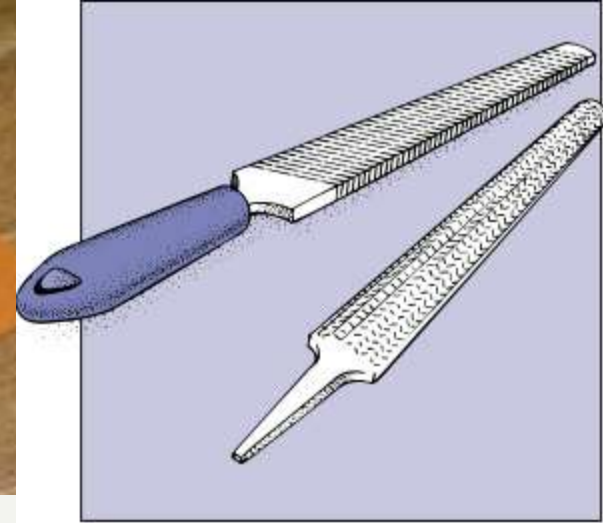



Place wood in the vice

Wrap some sand paper round a file and **GENTLY** Sand any uneven edges like those **circled in red**



STEP 3

Glue your pieces together

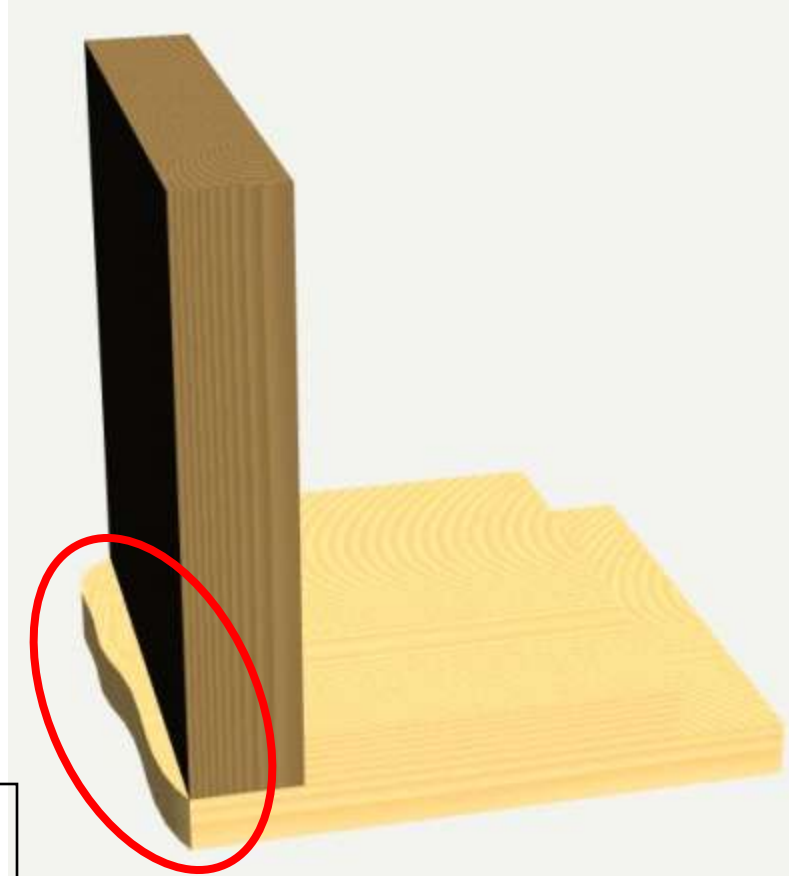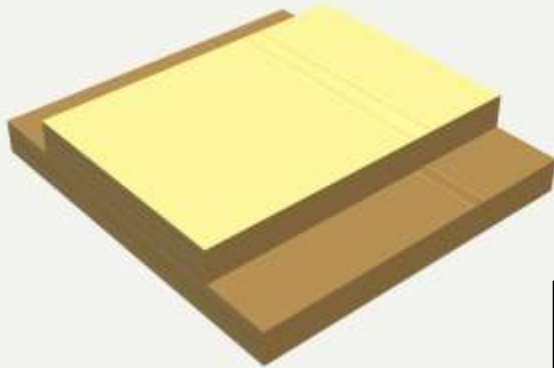

If you have any unwanted bits sticking out like mine **Circled in Red** sand them off on the belt sander after the glue has dried.

